


# Installation

Shower Guide gutter capacity 30 ltr p / min

## Tools Needed



## D I A G R A M

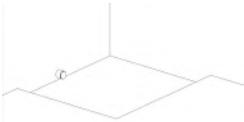

1. Start installing



2. Laying the ground to tilt 1-2°



3. Put the shower drain in place and use spirit-level to ensure the horizontal surface around it.




4. Install the water pipes




5. Fill and keep the ground to tilt 1-2°




6. Brush the first waterproof coating

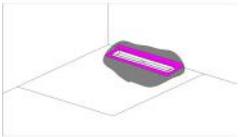


7. Install waterproof cloth

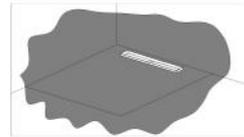


8. Brush the second waterproof coating in large area

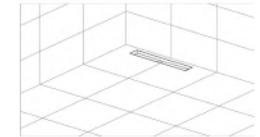


9. Lay tiles

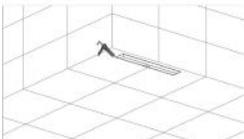

10. Fill silicone between floor drain and ceramic

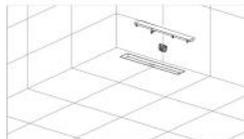

11. Install the anti-odor part and cover the filter net

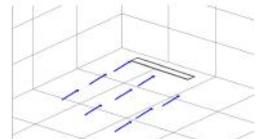

12. Complete the installation